 


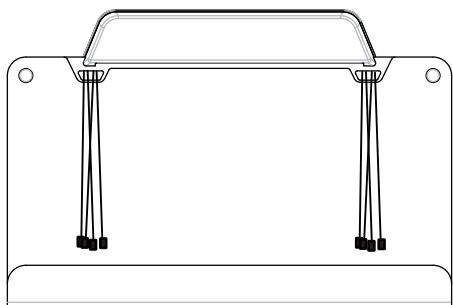

Model: CLWM816

A Description and Function:

The Wall Mounted Charging Station is made for charging up to eight (8) mobile devices simultaneously via adaptor plugs. The Charging Station is made for office and indoor use only.

* The cooling fans are heat activated when temperature > 45°C

B Intended Use:



Do not use the device in any way other than those described in the chapter 'Description and Function'. Use this device in dry interior rooms only. Failure to adhere to these instructions and notes on safety may cause fatal accidents, injuries and damages to persons and property.

C Notes on Safety:



ATTENTION! Only skilled electricians may assemble and disassemble the housing of the product. There is a risk of electric shock and short circuit!

This product is not a toy and should not be used by children. It contains small parts which can be swallowed and can injure when used inappropriately.

Page 1

D Package Contents:

1 x 100 ~ 240V / 50~60 Hz AC Adaptor
1 x Power cord
1 x Wall mounted Charging station
1 x Manual
1 x Installation guide
8 x Charging Cables for different devices

E Care, Maintenance, Storage and Transport



ATTENTION! There is a risk of electric shocks and short circuit!

- The device is maintenance free. Use of the device is at the user's own risk.
- Always disconnect the AC Adaptor from the mains power socket first.
- Do not clean your product when the AC Adaptor is connected.
- Do not use cleaning supplies and ensure the device is completely dry before re-using.
- Do not install the device, or place the AC Adaptor or Power Cord, in a way that creates a trip hazard for the installer or user.

Page 3

Height	55mm
Length & Width	480 x 310mm
Housing	Plastic

H Warranty and Liability:

- The producer grants a 12 month warranty on this device.
- The warranty only applies to the product and does not cover installation or vandalism.
- If any fault or damage is detected on the device, please contact your dealer and provide the purchase invoice as evidence of your purchase. Your dealer will attempt to troubleshoot the problem by asking you to describe the fault in detail. If the fault cannot be rectified, you will need to send the device to the manufacturer.
- The manufacturer is not liable for damages to persons or property caused by improper installation or operations not described in this guide. This includes, amongst others, any alteration and modification of the product and its accessories.
- Any use other than described in this user manual is not permitted, and caused loss of warranty, loss of guarantee, and non-liability.
- We reserve our right for misprints and changes to the device, packing or user manual.

Page 5

Contents

A. Description and Function.....	1
B. Intended Use.....	1
C. Notes on Safety.....	1
D. Package Content.....	3
E. Care, Maintenance, Storage and Transport.....	3
F. Troubleshooting.....	4
G. Specifications.....	4
H. Warranty and Liability.....	5
I. Note on Waste Disposal.....	6
J. Change Cables	7

- Please install the system and devices attached to it in a way that persons cannot be injured or objects cannot be damaged.
- Dispose of all packing, incidentals and insulating materials safely to minimise risk of cutting or inhalation by children.
- Do not install the product in places with high temperatures, high humidity or any area that may come into contact with water.
- Do not install the product close to openings of air conditioners, or places with excessive amount of dust, smoke or vibrations.
- To avoid falling, position the product on horizontal or flat surfaces only.
- Do not alter the product or any of its accessories. Please carefully read 'Warranty and Liability'.
- Do not use any damaged parts.
- Plug and unplug all cables / adaptors slowly and carefully.
- Ensure suitable packaging is used when the product is transported, e.g use the original packaging.
- For questions, defects, mechanical damages, malfunctions and other functional problems which cannot be resolved by this manual, please contact your dealer for repair or replacement, as described in the Chapter 'Warranty and Liability'.
- Please read and adhere to all instructions detailed in 'Specifications' and 'Intended Use'.

Page 2

F Troubleshooting:

Problem	Help
The device does not charge	- When the device is charged completely, no charging is shown. - Check all connections for tight fitting. - Use only the fitting Charging Adaptor Plugs.
Failure of the Female USB function	Make Sure using a fitting and compatible USB charging cable.
Other problems	Consult your dealer.

G Specifications:

Model	CLWM816
Input Voltage	100~240V AC / 50~60 Hz
Output Voltage (AC Adaptor)	18V
Output Voltage (Charging Adaptors)	5V
Output Current	8 x 1.5 A
Number of charging ports	8
Weight without AC Adaptor	1500 g

Page 4

I Notes on Waste Disposal:




In accordance with the European WEEE directive, electrical and electronic equipment must not be disposed with consumer waste. At the end of the device's lifetime, the consumer is committed by law to deposit electrical and electronic devices at public collection points or at the dealer's premises. Particulars are regulated in national right. The symbol on the product, in the manual and on the packaging alludes stipulates these terms.

Attention!

Please read the user manual completely and carefully. It includes important information on the product's warranty and detailed instructions for proper installation and use. Keep this guide and refer to it in the event of a product fault.

 
Page 6

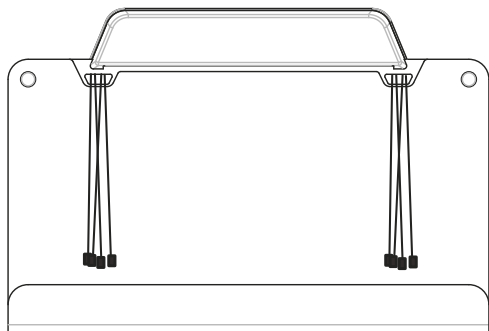

WALL MOUNT CHARGING STATION


Installation Manual

 Changeable Advertisement board

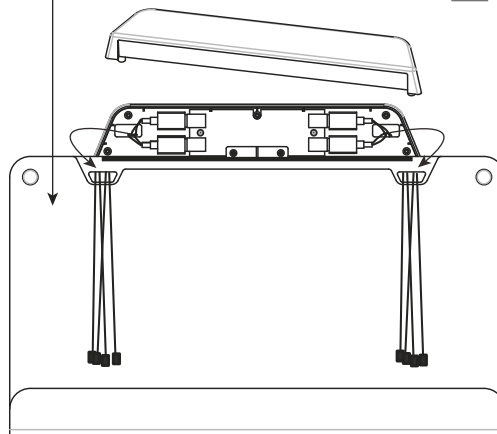


- (A) Connect the eight (8) Charging Cables to the USB ports.
- (B) Restall the front panel.

 2

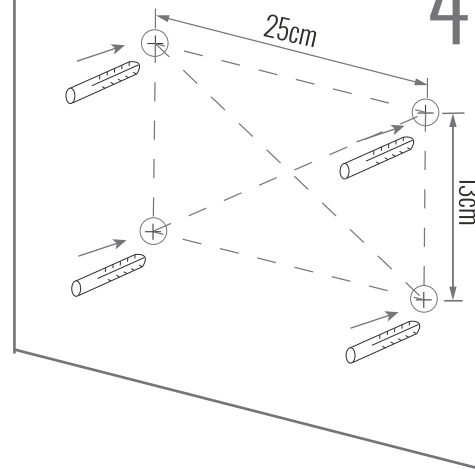


Drill four (4) * 0.8mm holes 48mm depth on to the wall where you would like to install the station. Then insert a plastic expand tube in each of the holes.

 4

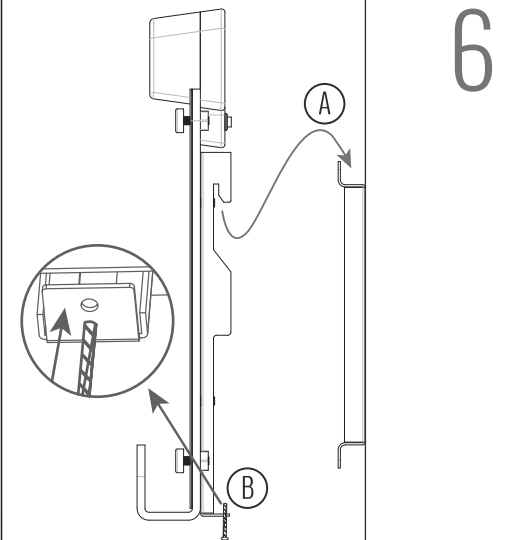


- (A) Hang the station on the mount.
- (B) Secure tight the station on the mount by fastening the two (2) screws at the bottom.

 6

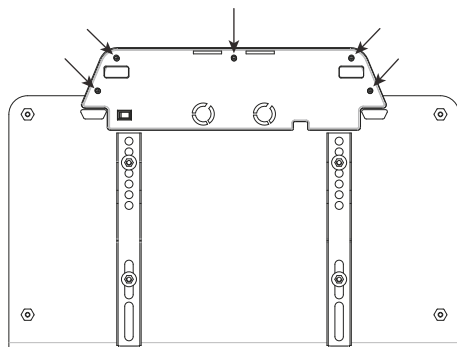


Open the front panel by unscrewing the five (5) screws.

 1

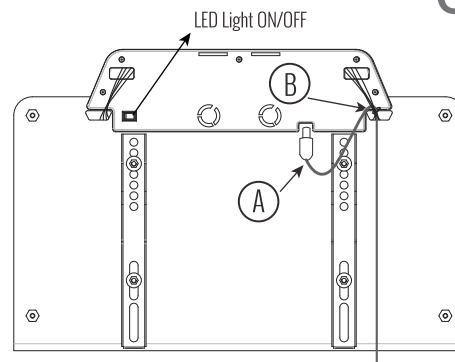

- (A) Connect the included Power Cord to the AC Adaptor then to the Charging Station.
- (B) Tie the Power Cord to the Charging cables.

 3

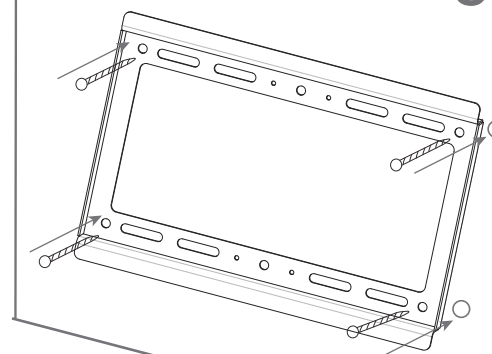

Fix the back mount onto the wall.

5

WARNING



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT DISASSEMBLE DEVICE

Notes on Use

- To prevent fire or shock hazard, do not expose the device to rain or moisture.
- To avoid electric shock please do not disassemble the device.
- If trouble occurs, immediately disconnected the device from wall socket.

Maintenance

- Wipe the device with a soft dry cloth to prevent dust build up.
- If the device is very dirty, use a cloth with a bit of neutral solvent to clean it.
- Keep the device away from strong volatile solvents or chemicals, such as thinner, benzene, alcohol, pesticide, rubber or vinyl plastic etc, which may lead to deterioration or damage to your device.