



SAGES GRAPHICS HEADER CARD

(Only for selected models)

STEP 1

Remove the cover at the top of the pole
(All of our sage accessories use the channels on the pole to attach the accessories).

(a) Simply loosen the screw located at the bottom of the sign and then slide the connectors along the channel.

Note: The sage graphic header is the last item which is placed at the top of the sage after any accessories are added.

(b) Tighten screw at the desired height.

