



Complete set



1. The floor stand main body

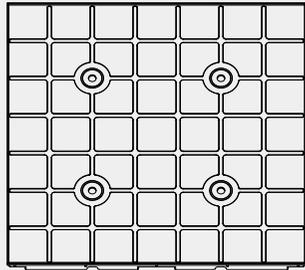

 2. The clear PC cover plate



3. Aluminum sloping edge



4. Printed sheet



5. The corner connector




6. The two-pin connector



7. The four-pin connector




8. Sucker

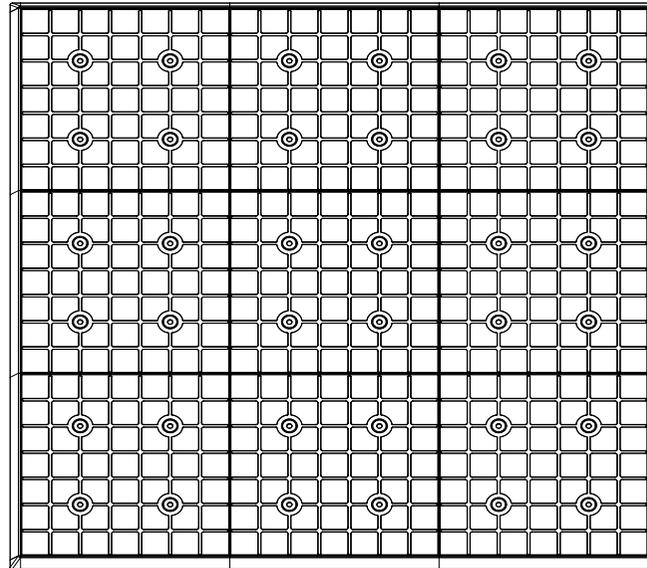


(The following are 9 stage plates as an example.)

2

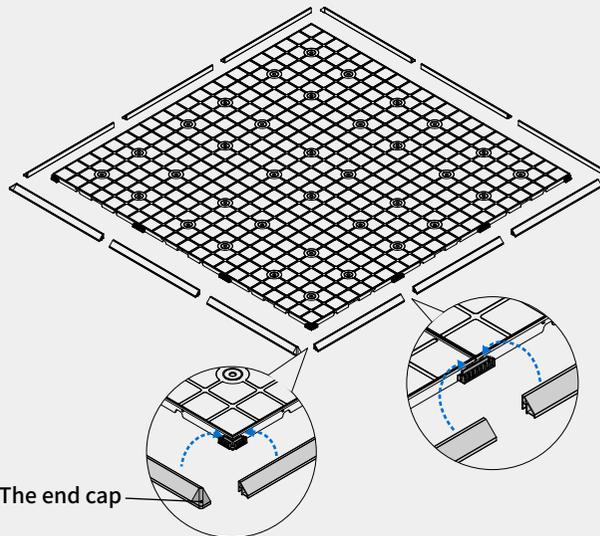


2. Place the aluminum edge strip in the slot of the connecting piece.
(The function of the end cap is to fill the gap of the outer corner of the stage.)

1

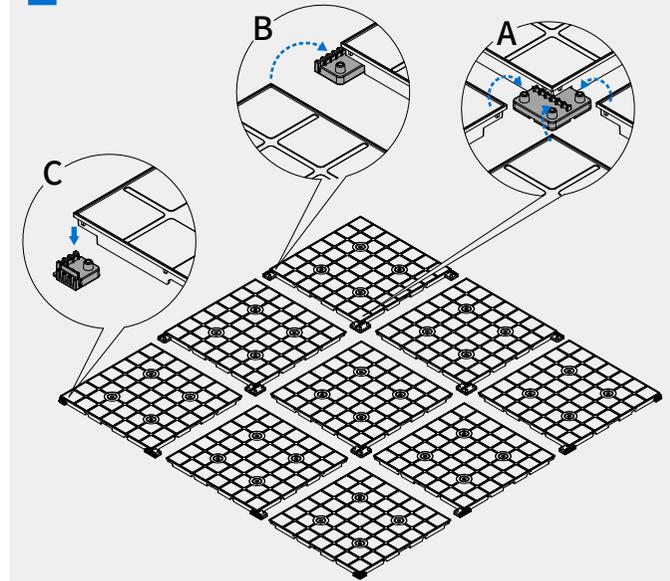

1. Put the different connectors under the stage platform.

3

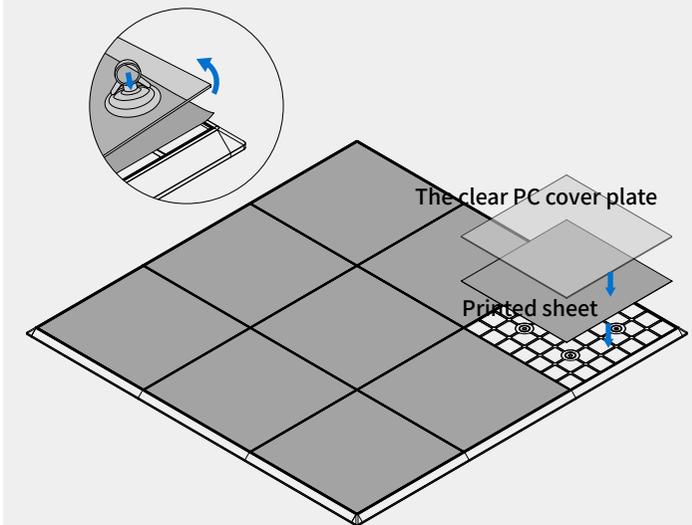

3. First place the printing, then cover the PC board. Finished.
(Tips: Press the sucker on the clear PC cover plate and take it easily, and the printed sheet can be changed conveniently.)