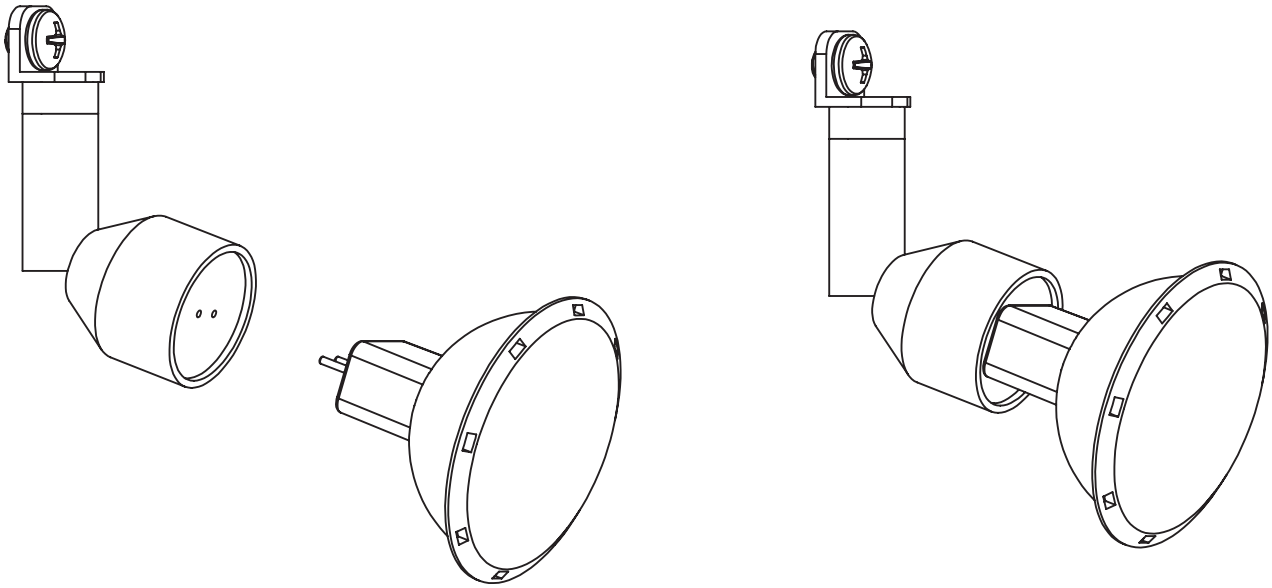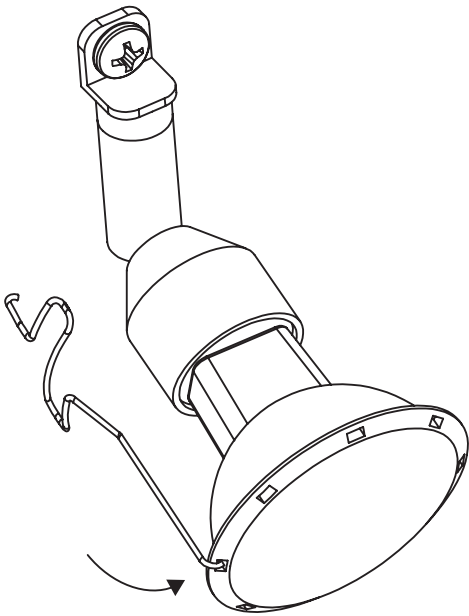# LED Replacment Instruction - Side lights

Step 1.
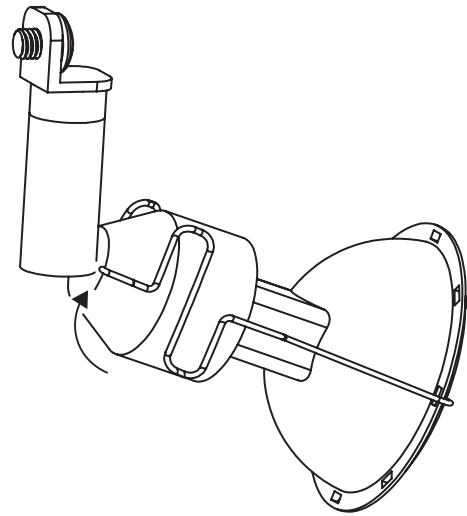Align LED pins to housing holes and Insert LED.

Step 2.
Hook the long end of spring
to the front of the LED.
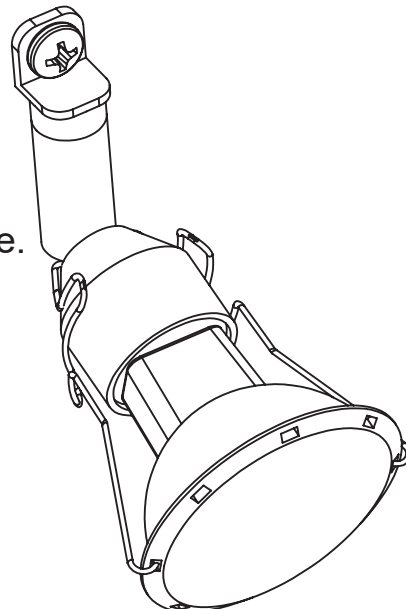
Step 3.
Attach the other end of spring
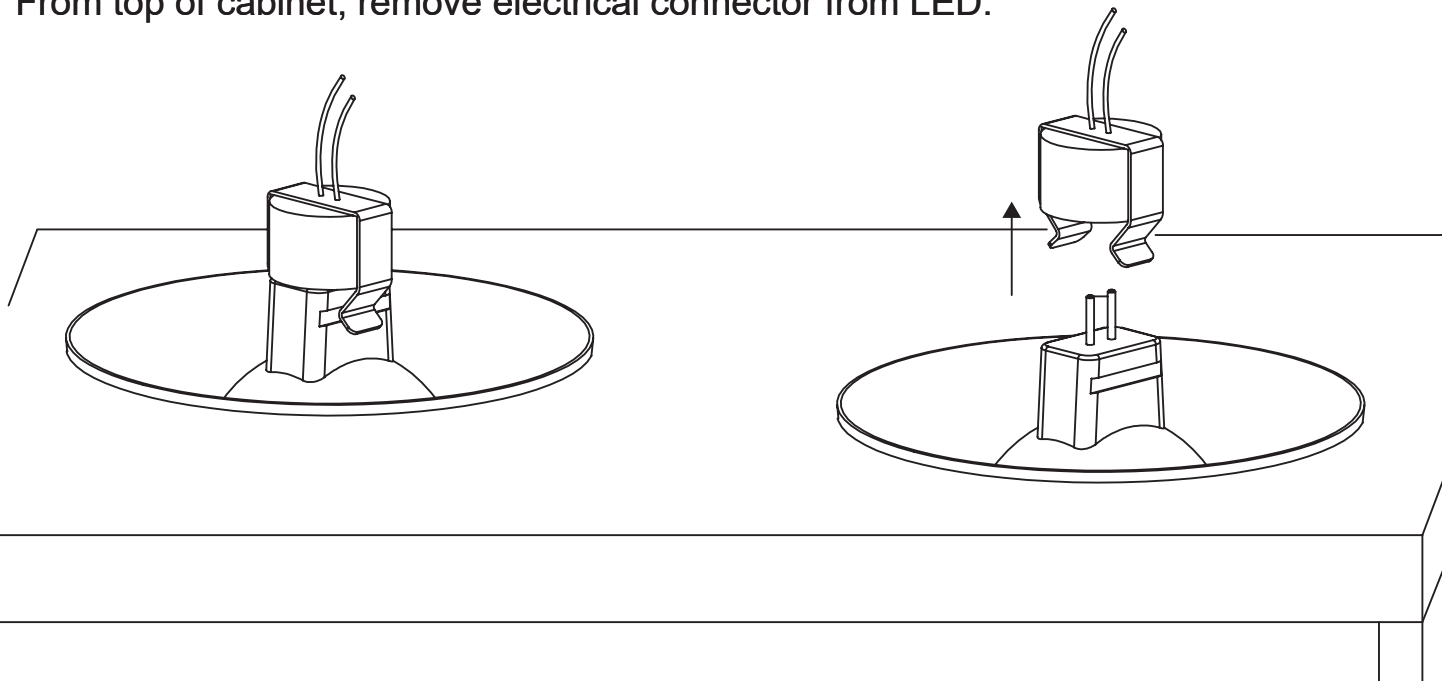to the back of housing.
Repeat Step 2 & 3 for other side

LED is ready for use.
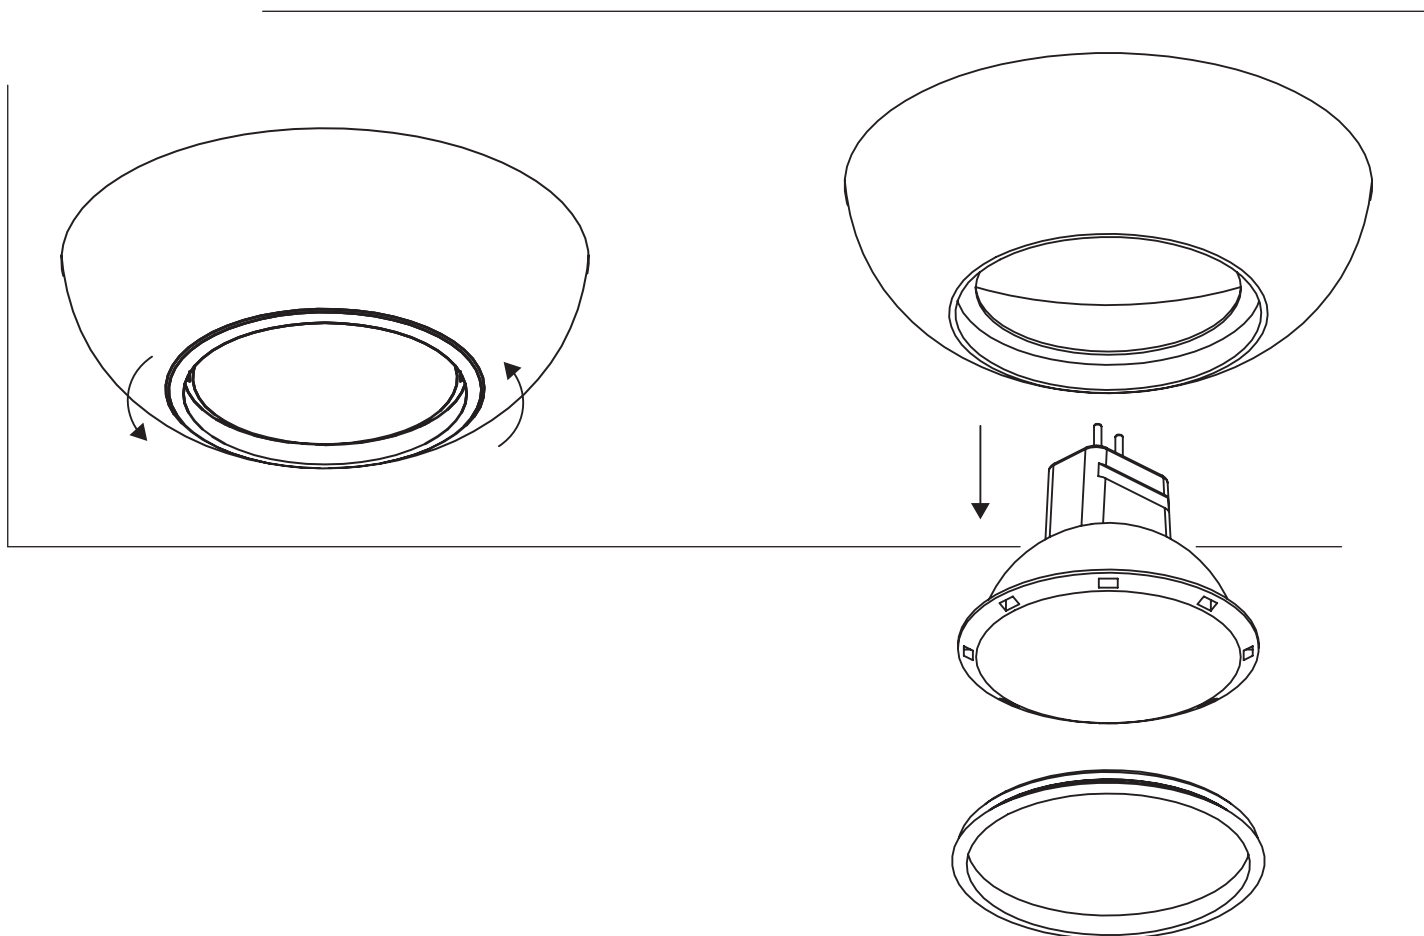
LED Replacment Instruction - Top lights

Step 1.
From top of cabinet, remove electrical connector from LED.

Step 2.
From inside cabinet, un-screw the front of housing, LED will now come out.

Place new LED in position and reverse the steps to connect the new LED.