


# TRADE SHOW DISPLAY COUNTER


PPCSQP & PPCSQBLK Instructions

## STEP 1

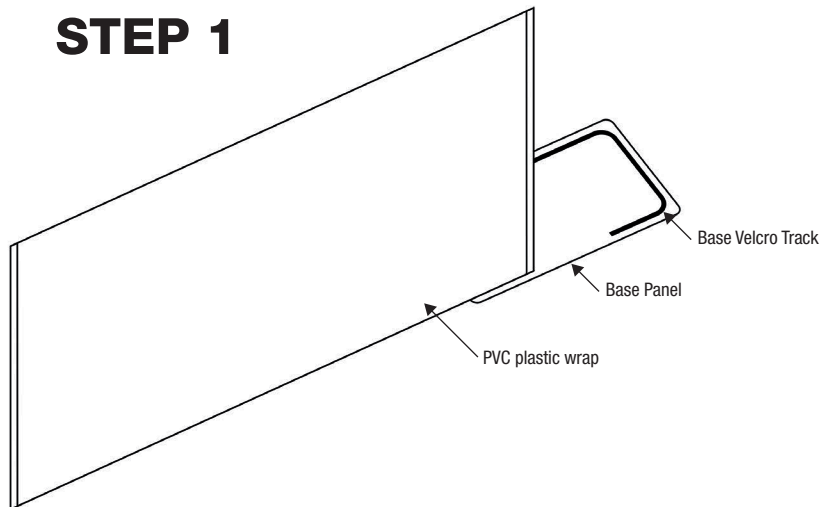


1. Start by positioning the base on the floor and aligning the PVC plastic wrap with the edge of the base's Velcro.

## STEP 2

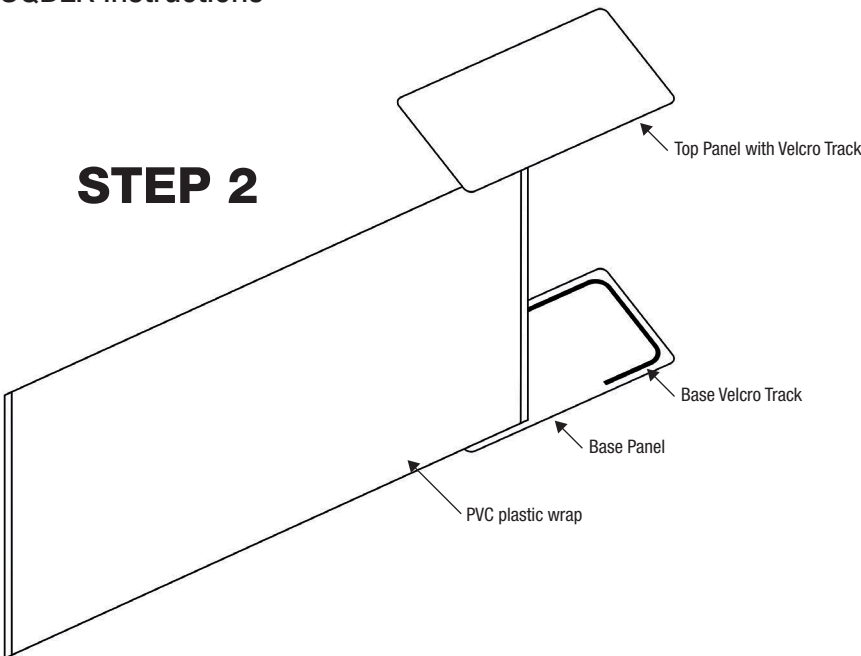

2. Next, align the PVC plastic wrap with the edge of the top panel's Velcro, and press it firmly to secure it in place.

## STEP 3 in Sequence

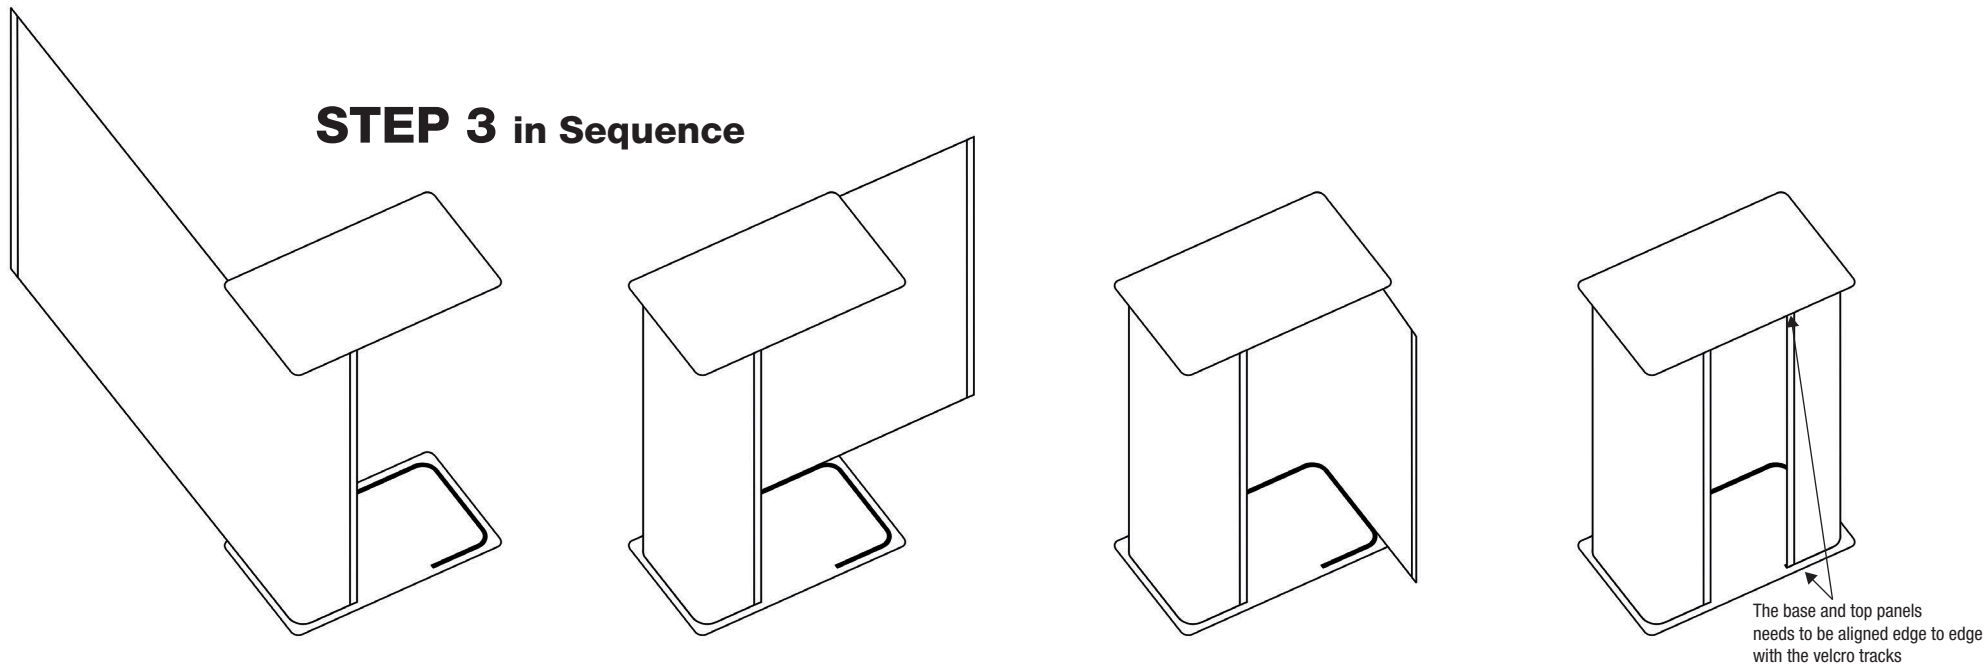

3. Carefully wrap the PVC plastic wrap around the Velcro edging of both the top and base, ensuring proper alignment. Apply gentle pressure to secure the wrap in place.