




1. Attach the 4 wheels to the bottom frame. Make sure the wheels are facing the same direction.

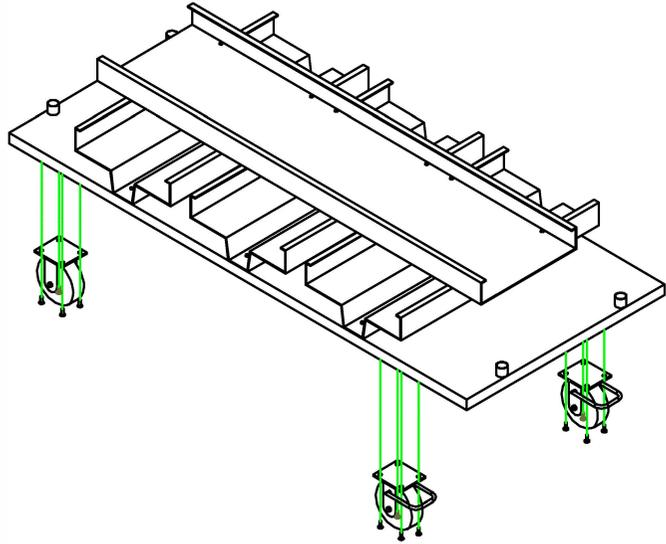


2. Bolt the 2 handles to the trolley.

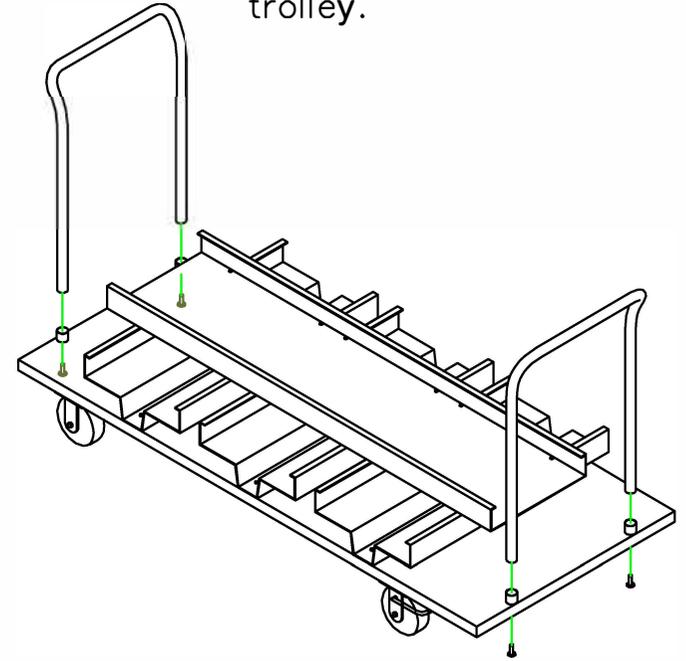

3. The cart is complete.

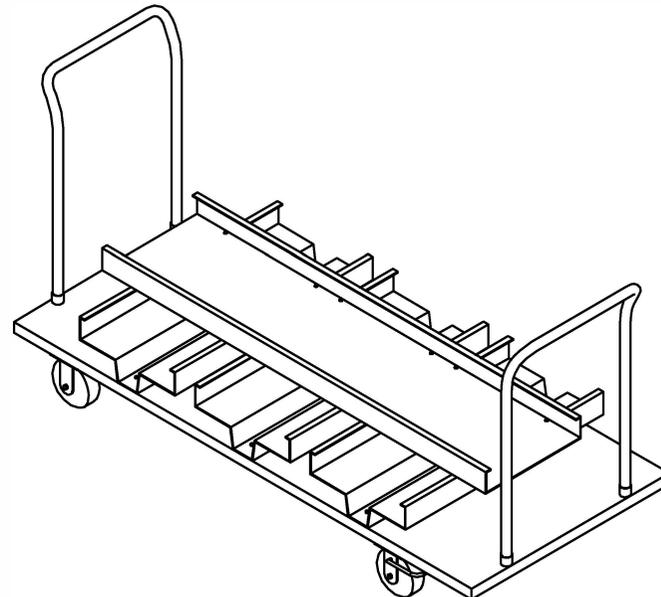

Screws:
16 pcs M8 x 25 for Wheels Assembly
4 pcs M10 x 16 for Frame Assembly

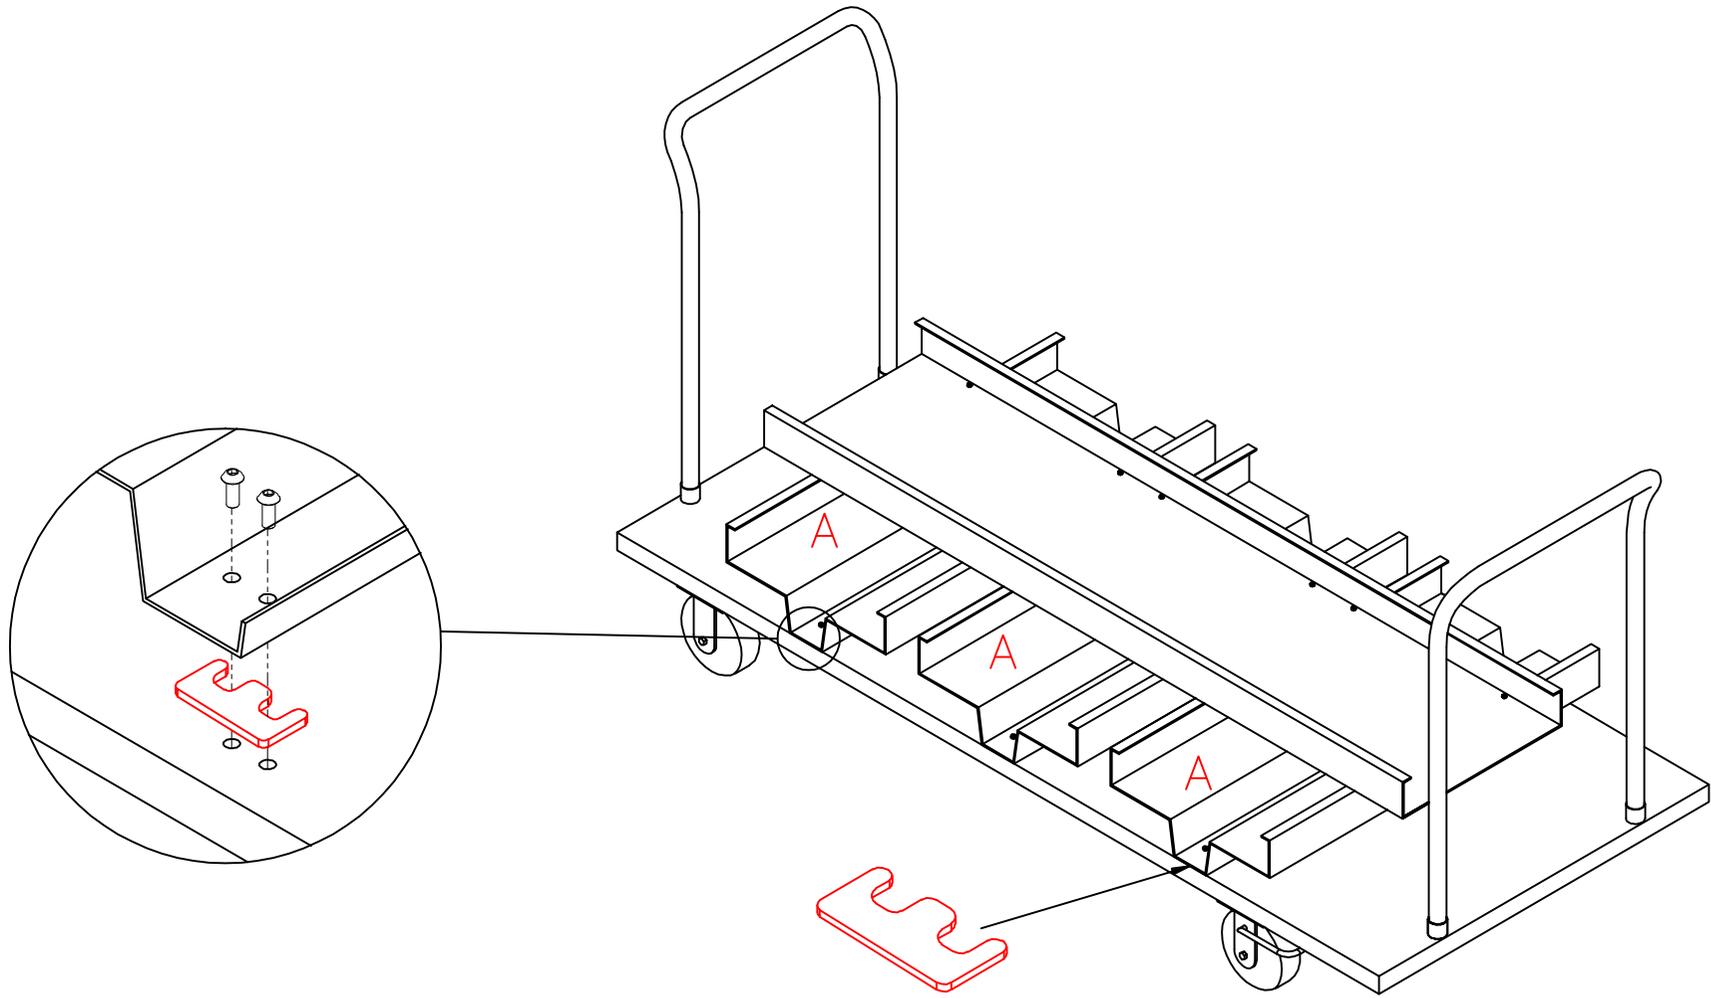

steel pad
(6pads for 1 cart)

- 1, loosen 4x bolts on both ends of groove bent
- 2, push 2x pads under groove bent
- 3, tighten 4x bolts, to finish installation of 2pads

	QTY: 6 PCS
	M6x15 Screw=12 pcs
	ALLEN Key = 1 pcs